




## Custom Dynamics® Headlight O-ring Tech Bulletin

On some models the Headlight O-ring is needed to help secure the headlight in place. You will need to use a Headlight O-ring if after mounting the headlight and the headlight will move side to side or rattle with the retaining ring fully tighten. The headlight O-ring is placed between the headlight and the retaining ring to help secure the headlight.



1. Remove the headlight retaining ring, place the O-ring inside the retaining ring.
2. Reinstall the headlight retaining ring on the headlight.
3. Mount the headlight in the headlight bucket and secure with the retaining ring (O-ring installed).
4. Confirm the headlight does not move side to side.

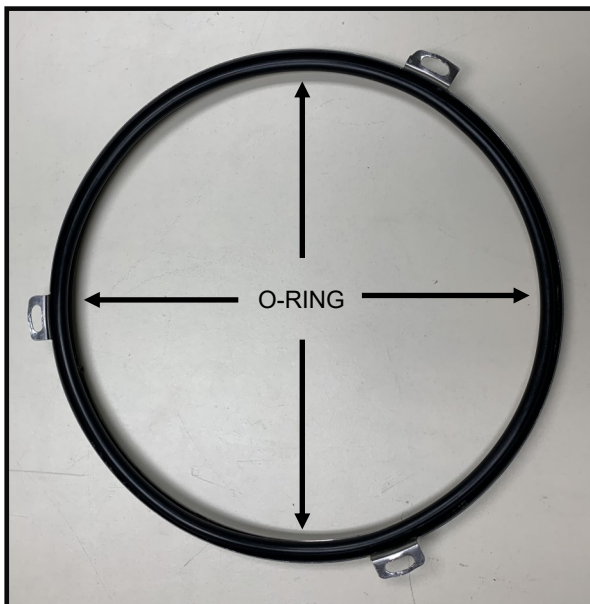

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST